
9.2. Spare parts and accessories

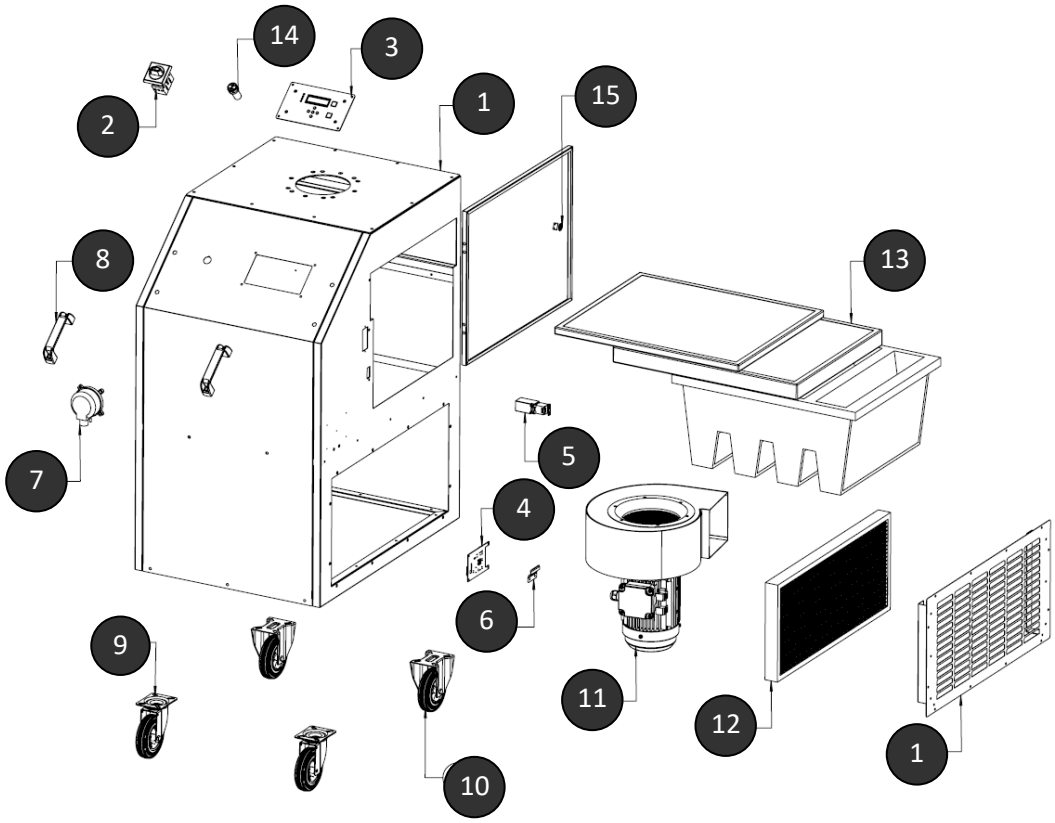

N°	P/N	UM	Q.ty	Description
1	50FILU02200	No	1	Unit black cabinet
2	2050060	No	1	16A main switch
3	DBCENT0M230000	No	1	Control pc board
4	DBCENT0M2300SS	No	1	Start/stop pc board
5	ACC0MFE0000070	No	1	Safety micro for filter inspection door
6	COM00173	No	1	Rubber clamp for ground cable of the welding unit
7	3240005	No	1	Filter pressure differential gauge
8	DBMANUNI20	No	2	Handle
9	DBRUOTAFRENO	No	2	Swivel castor with brake
10	DBRUOTAFISSA	No	2	Rear castor
11	SELFUNI022020	No	1	Extractor fan 1phase 230V 1.1kW
	SELFUNI022040	No	1	Extractor fan 3phase F 400V 1.1kW
12	RF0UNI2200003	No	1	Set of 2pcs active carbon filter [5+5Kg]
13	RF0UNI2200000	No	1	Set of replacement filters for UNI 2 H
	RF0UNI2200024	No	1	Set of replacement filters for UNI 2 C
	RF0UNI2200021	No	1	Set of replacement filters for UNI 2 C W3
	RF0UNI2200012	No	1	Set of replacement filters for UNI 2 K
	RF0UNI2200026	No	1	Set of replacement filters for UNI 2 C W3 Laser
	RF0UNI2200001	No	1	Set of prefilters for UNI 2 E
	RF0UNI2200015	No	1	Electrostatic filter for UNI 2 E
14	2300054	No	1	Acoustic alarm IFA
15	COM00085	No	1	1/4 turn lock
	COM00143	No	1	Handle IFA