
7.2 Setting up / Assembling

Connect the compressed air hose supplied by the customer with the coupler socket NW7 on the hand lever. Fill the platform that is positioned on a pallet with air until the safety catch slides over the last notch. Release the lever valve.
Hoist the platform with an appropriate lifting device at the cross strut of the cantilever that the lower frame is placed on the floor. Remove the pallet and lower the platform.


Assembling of the roll-off protection

The assembly of the roll-off protection is absolutely necessary to protect the vehicle against rolling away.


Step 1: *Tighten the supports to the cantilevers of the platform. Then insert the roll-off protection, see picture 2.*

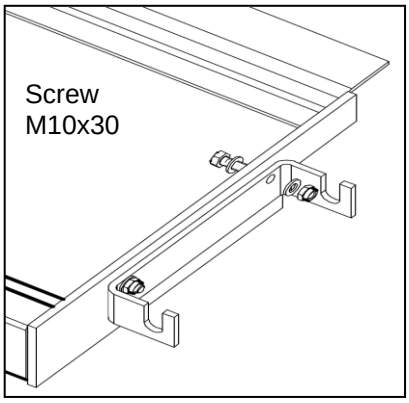

Lock nut M10 and washers
M 10,5

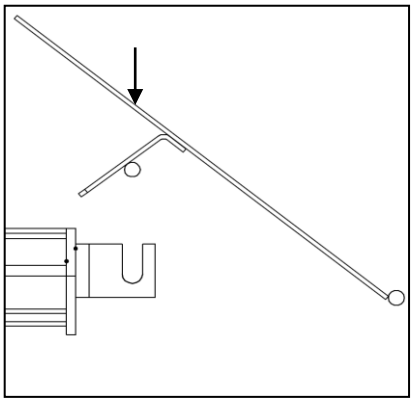

Step *2*: *Clamp the second flap at first with the left side, then with the right side into the channel. At the end insert the grid.*

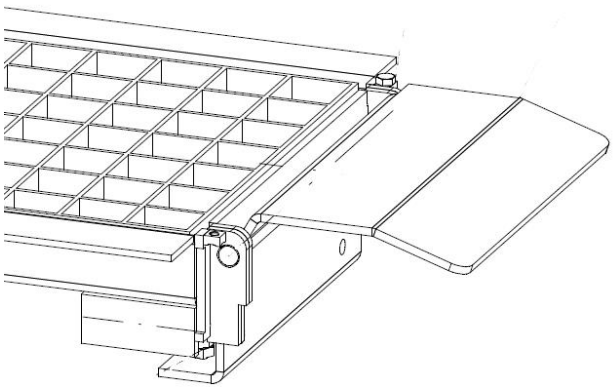

Check if all screws are fitted in a perfect way!